




Carrier reefer units




Keypad layout:

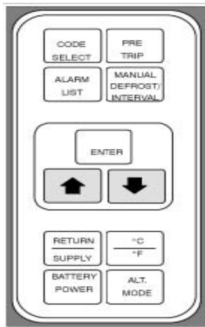

Entering the temperature setpoint:

- In normal operating mode, the display shows the setpoint on the left side.
- By pressing the  or  key the setpoint is adjusted by 0.1°C and the setpoint digits start flashing.
- Upon reaching the desired set point, press the Enter key, the new set point is now accepted and activated.
- If no keys are pressed for 5 seconds, current setting will be cancelled and previous setpoint shown again.

Entering the Humidity setpoint (if required):

- Press the Code Select key.
- Use the  key until Cd33 is displayed in the left side of the display.
- Press the Enter key to select the Cd33. The value on the right side of the display starts flashing.
- By pressing the  or  key the humidity setpoint is adjusted by 1%.
- Upon reaching the desired set point, press the Enter key, the new set point is now accepted and activated.
- To indicate that humidity control is active, the supply LED in the display will flash every second.
- If no keys are pressed for 5 seconds, current setting will be cancelled and previous setpoint shown again.