



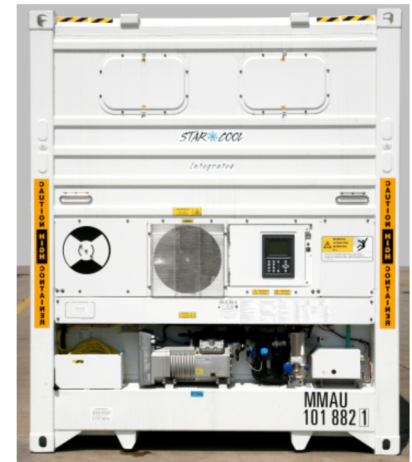

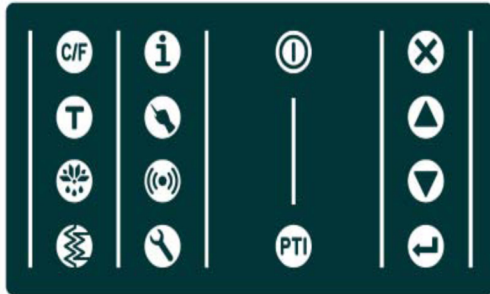





Starcool reefer units










Keypad layout:



Entering the temperature set point:

- Press the Operation key 
- The display will now show the Operation menu. The cursor is in the top row (001-Setpoint). The ID of this row is highlighted.
- Press the Enter key . Now the setpoint value will be highlighted.
- By pressing  or  the setpoint is adjusted 0.1°C and the setpoint digits are highlighted in inverse writing. If the key is held, the setpoint will automatically be incremented by 0.1°C until the key is not longer held. After approximately 3 seconds the setpoint will be incremented by 1.0°C.
- Upon reaching desired temperature, press and hold  for 3 seconds. The setpoint will be accepted and shown in normal writing again.
- If the keys ,  or  are not pressed for 5 seconds, current setting will be cancelled and previous setpoint shown again.

Entering the humidity set point (if required):

- Press the Operation key 
- The display will now show the Operation menu. The cursor is in the top row (001-Setpoint). The ID of this row is highlighted.
- Scroll to 004 – Humidity setpoint by pressing . Press the Enter key . Now the humidity setpoint value will be highlighted.
- By pressing  or  the setpoint is adjusted 1% and the setpoint digits are highlighted in inverse writing. If the key is held, the setpoint will automatically be incremented by 1% until the key is not longer held.
- Upon reaching desired temperature, press and hold  for 3 seconds. The setpoint will be accepted and shown in normal writing again.
- If the keys ,  or  are not pressed for 5 seconds, current setting will be cancelled and previous setpoint shown again.