





## Thermoking reefer units







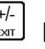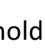





Keypad layout:



### Entering the temperature setpoint:

- Press the  key. The Setpoint menu appears with the cursor in the [TEMP SETP] line.
- Press the  key. An Enter Arrow appears in the menu line and the current setpoint disappears. Enter (type) the new setpoint in the LCD display using the general purpose keypad.
- Press the  key first to enter a minus setpoint. The cursor moves to the right of the screen as each key entry is acknowledged and displayed.
- Press and hold the  key until the cursor stops flashing. The new setpoint is recorded in the controller and appears in the LCD display.
- The controller will default (return) to the previous setpoint if the setpoint is not entered within 30 seconds.

### Entering the Humidity setpoint (if required):

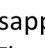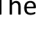- Press the  key. The Setpoint menu appears with the cursor in the [TEMP SETP] line.
- Press the  or  key to scroll to [HUM CONTROL] line.
- Press the  key to change the mode setting. Cursor moves to end of menu line and flashes.
- Press the  or  key to toggle between [OFF] and [DEHUM].
- Press and hold the  key until cursor stops flashing. New mode setting appears in display.
- Press the  or  key to scroll to [HUM SETP] line.
- Press the  key to enter a new setpoint. An Enter Arrow appears in the menu line and the current setpoint disappears. Enter (type) the new setpoint in the LCD display using the general purpose keypad. The cursor moves to the right of the screen as each key entry is acknowledged and displayed.
- Press and hold the  key until the cursor stops flashing. The new setpoint is recorded in the controller and appears in the LCD display.
- Press the  key to exit the Setpoint screen.